



Led M Player USER MANUAL


(For Q1 controller)

Step 1: Install software step by step by click the next and accept, [version: Led MPlayer 1.1.8]


After installed the software ,double click to RUN ,

Follow the setting step by step

1: Goto 'Settings' then 'ScreenPara Settings'enter Password: 888

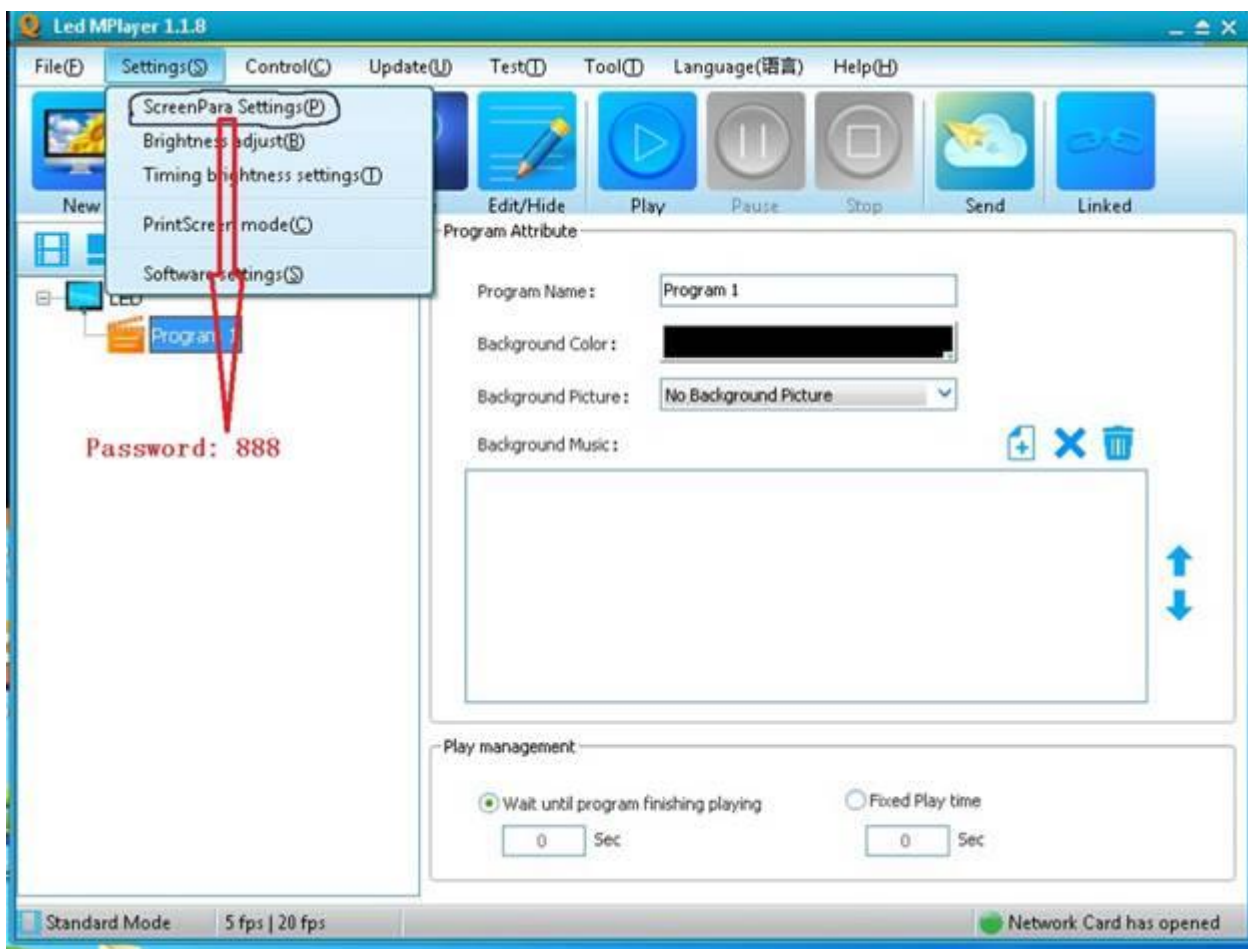

Detailed Screen parameter settings consists of three parts

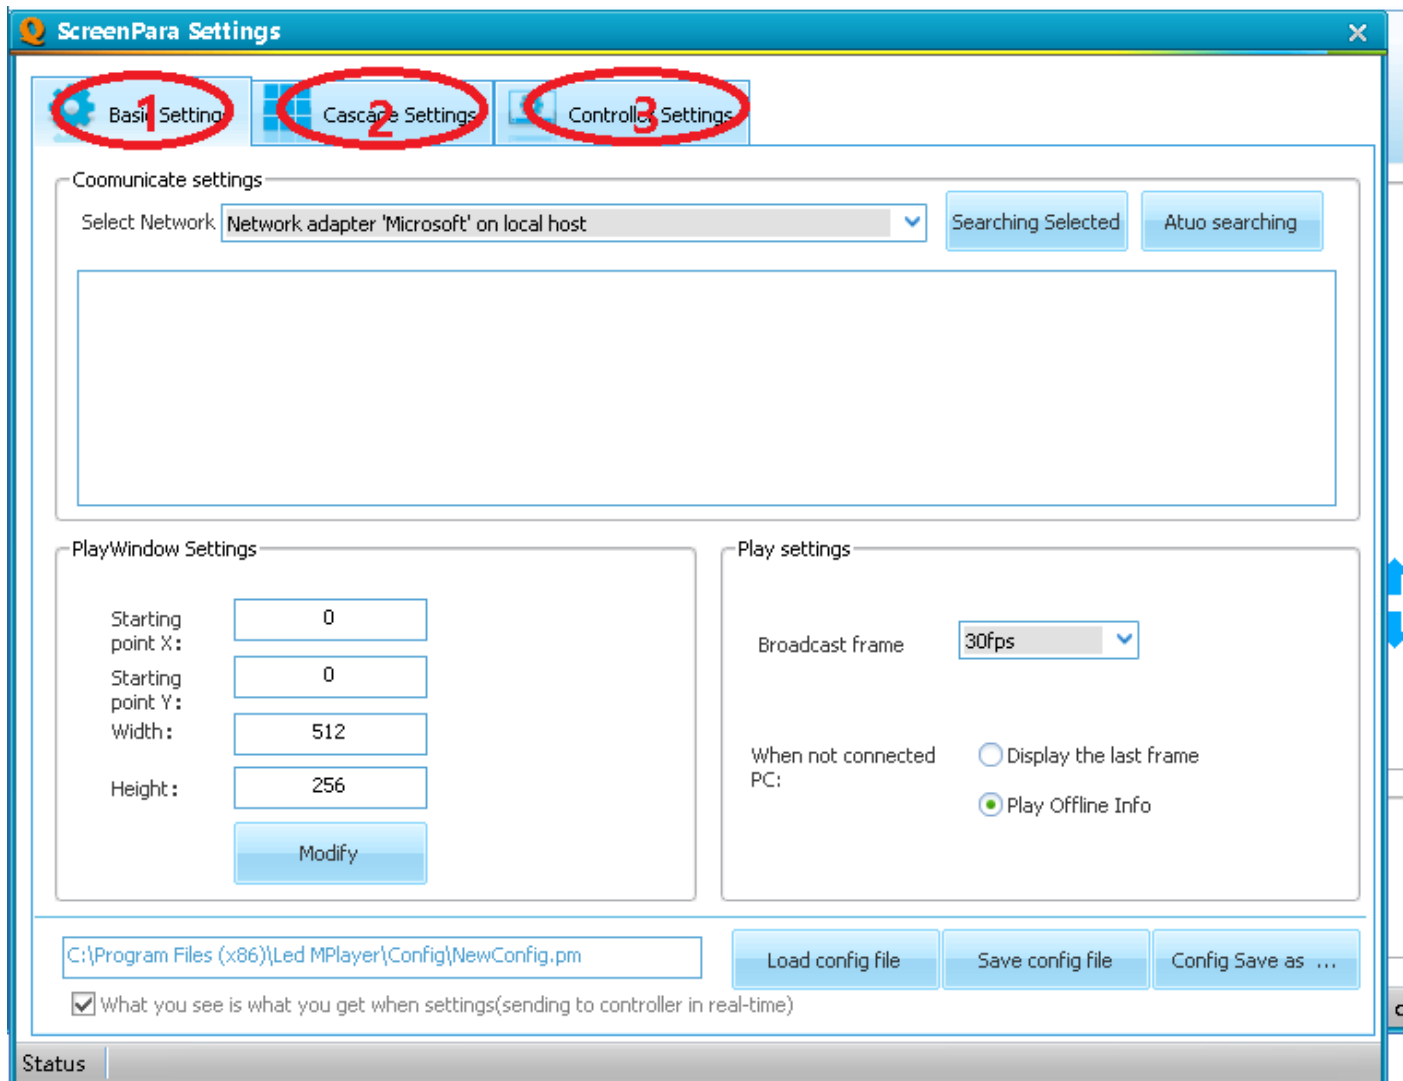

1: Basic Settings: controller searching, screen size setting and play speed,


2: Cascade Settings: to joint every controllers to one screen

3: Controller Settings: to select the module and adjust other parameters,

Fast setup, 1, search and find the controller(refer to 1-2), then load the config file(.pm) provide by seller , exit the window and finished the setting.**

Go to step 4 to edit and send the program.

Step 1:Basic Settings

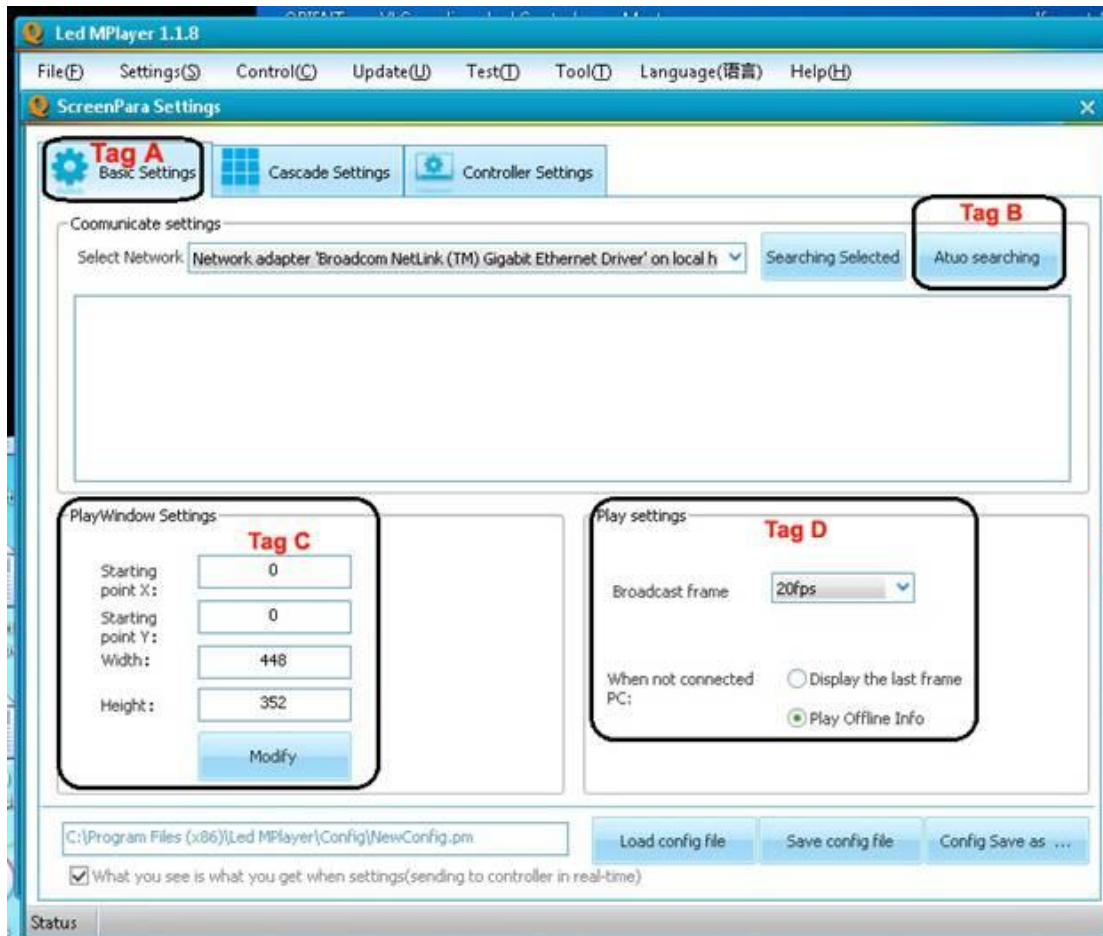

1-1, Click Tag A to start basic setting,


1-2 Turn on LED screen power and connect LAN(input cable) with computer LAN port(Gigabit LAN PORT) and click on Auto searching as shown in fig. (Tag B)

1-3 If all cables are connected properly and LED Display is working, it will display number of control cards, if it doesn't show any control card that means there is mistake in cable connections.

1-4 Play window setting, enter pixel size of width and Height, and click on" Modify" to save.(Tag C).

1-5 Select the proper FPS according between 20-30 depends on the speed of the video. same as (Tag D).

Step 2: Cascade Settings

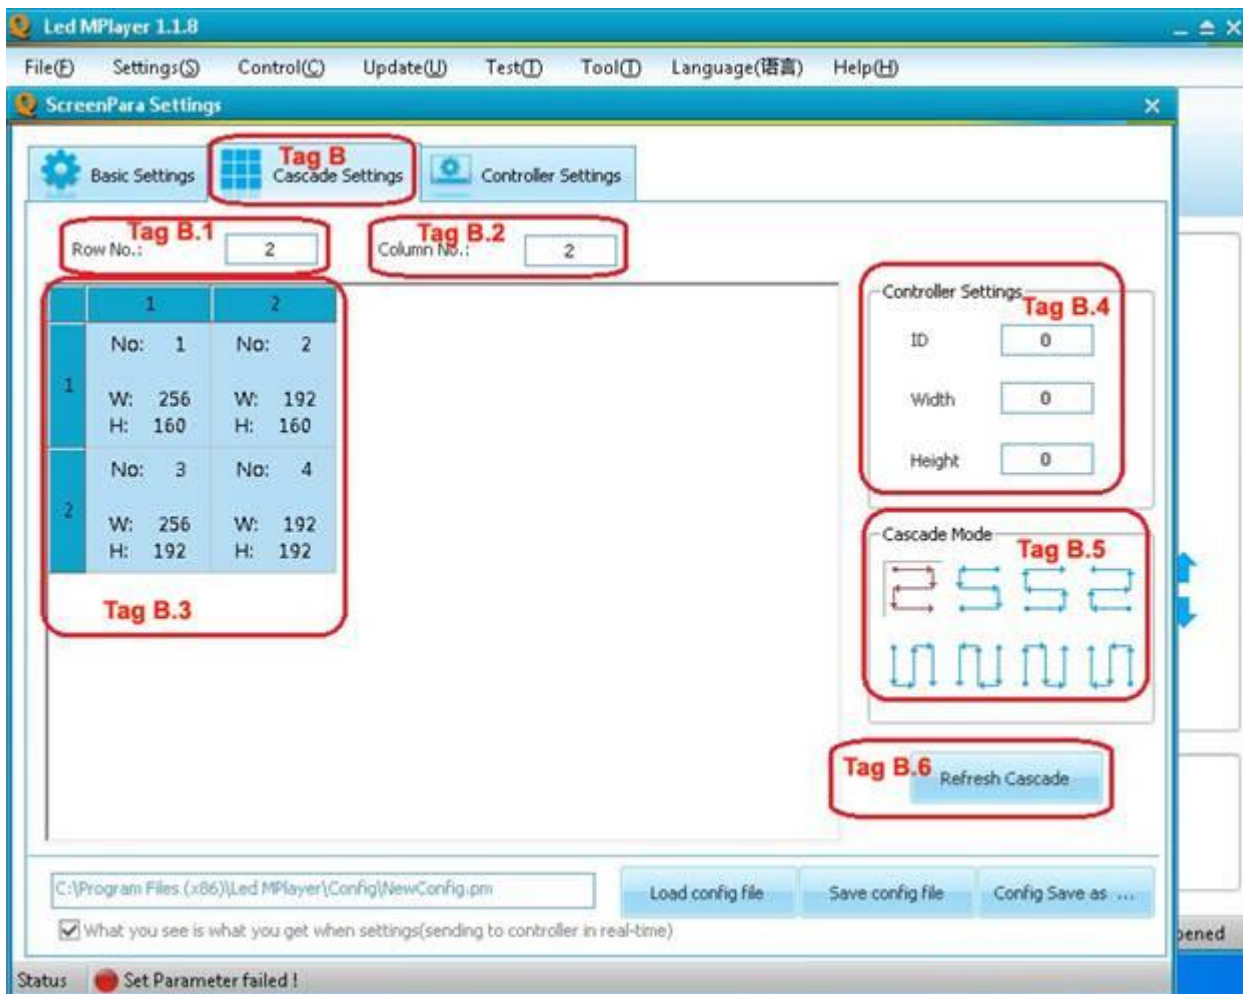


2-1, Click on “Cascade Settings” (by click Tag B)

2-2, If we found more than 1 controller from the basic setting, each one just like a screen, we should know how we cascade the screen to one big screen, how many in each row and column, so we enter the number separately in row(TagB.1) and Column (Tag B.2).


2-3, Then click on first control card (Tag B.3) and look at opposite side there are options Width and Height, enter each control card pixel separately. repeat the steps for each controller.

2-4 Cascade Mode (Tag B.6): This function is for adjustment of screen with respect to connection of control cards. You must select the way of cascade control card according to any order as shown in following pic. And click on that order.

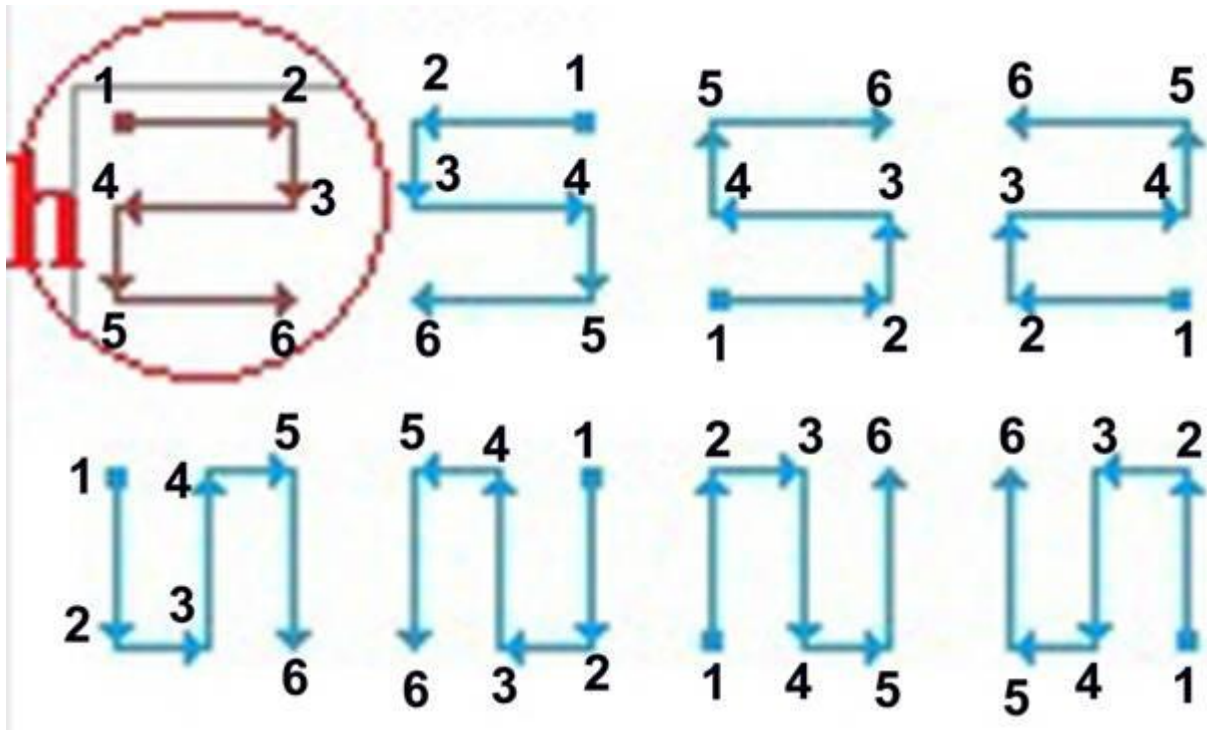


After cascade settings, refresh cascade.

Step 3: Controller Settings.

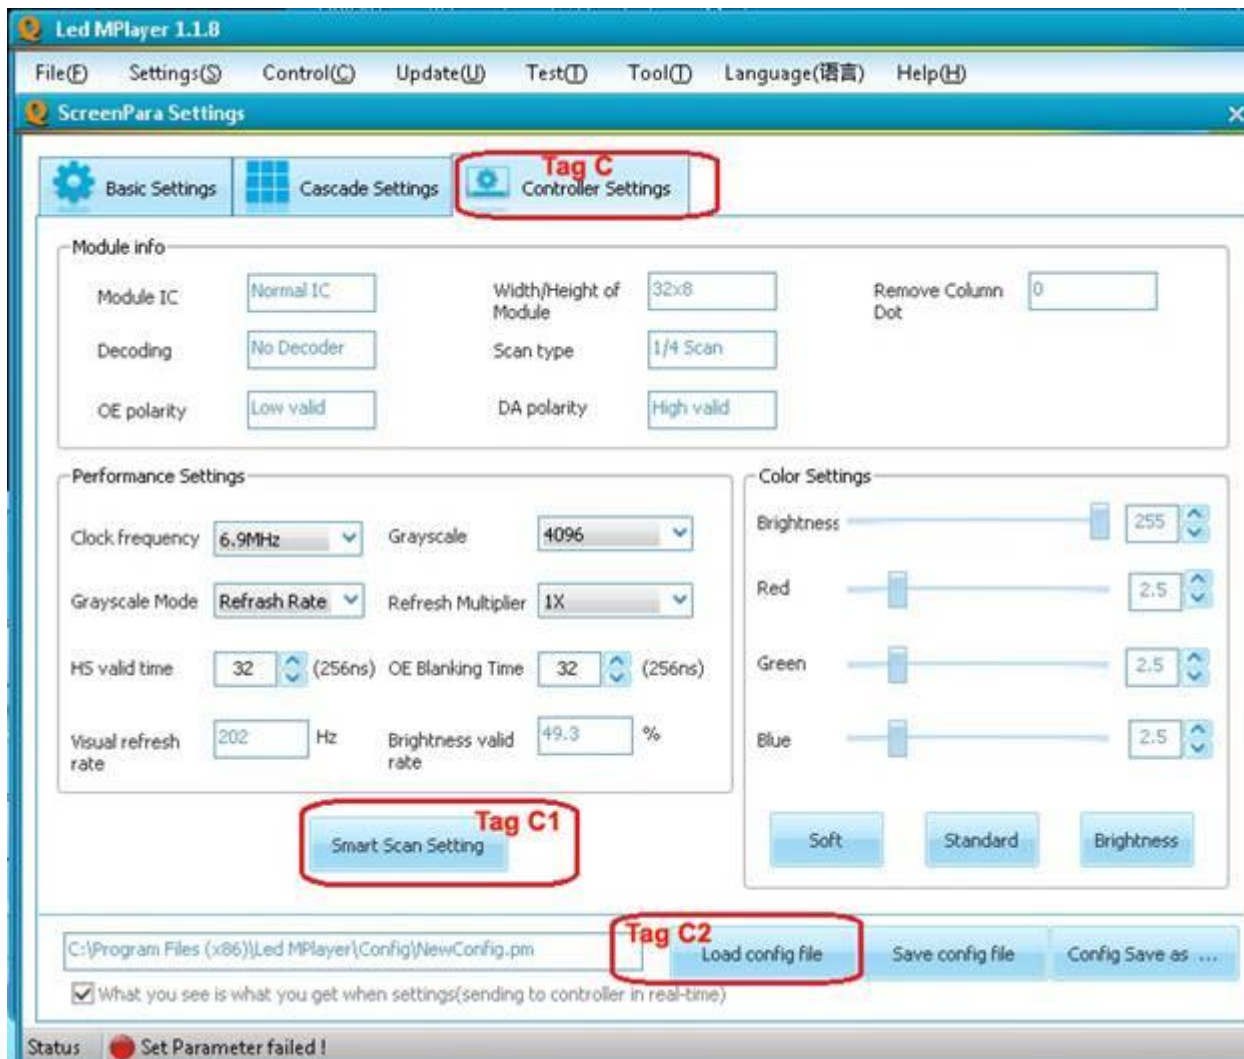


3-1, Click on “Smart Scan Setting ” (Tag C1).

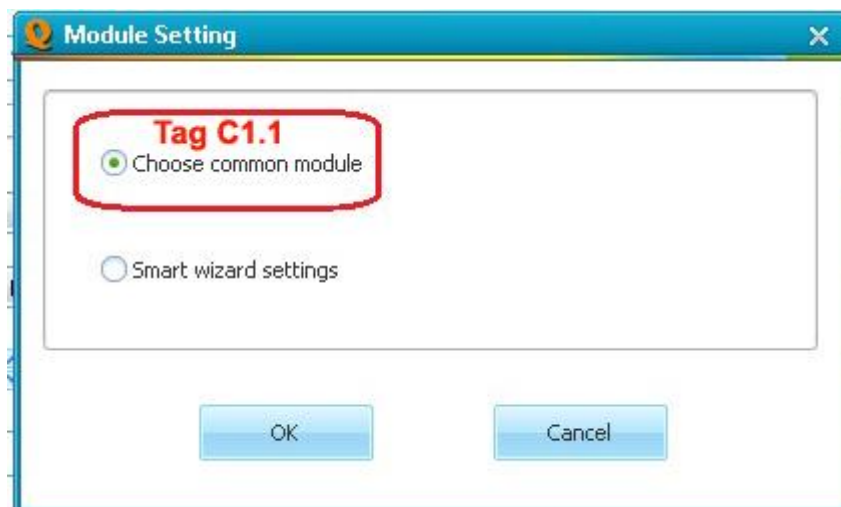

3-2, Choose Common Module.

3-4,If your module is not existing in the file, then contact your seller to get *.mzxx file ,

and import to the list by click “Import” (Tag C1.2)

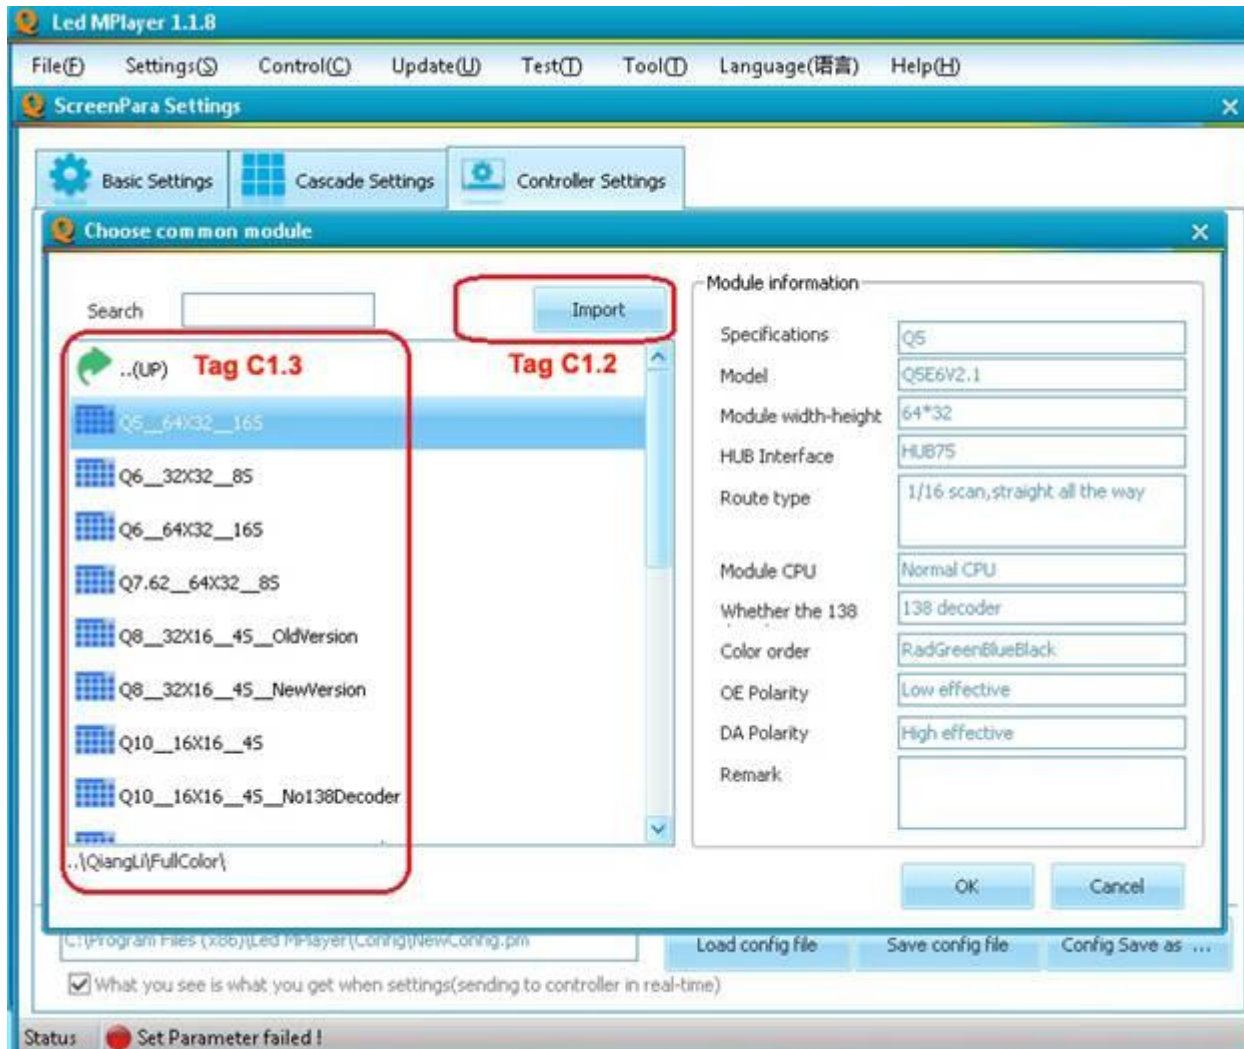

4.Edit and Send Program



4-1, After setting, add program then 'Add Area' as shown in pic. Above Pic (1st and 2nd)

4-2, To display file from your computer on the screen, click on "File Window" and insert your computer file, like video, photo, ms docs, etc.

4-3 , To display text, Click on " Single- line text window" or "multi-line text window" click and drag to change place and size on the screen. Type your text, choose animation, speed, border and background of your choice.

4-4, There is clock function and Program reflect function available to select.

After edited the program, that click on tag "SEND" then choose maximum speed and send your program in Display.